

Before Using the Product

Before using the product, please read this manual. Make sure that the end users read this manual and then keep the manual in a safe place for future reference.

■ Relevant manuals

Before using the product, please read the Safety Guidelines included with the base unit used, especially the following sections.

- SAFETY PRECAUTIONS
- CONDITIONS OF USE FOR THE PRODUCT
- EMC AND LOW VOLTAGE DIRECTIVES
- MACHINERY DIRECTIVE
- WARRANTY

The product details are described in the following manual.

Please develop familiarity with the functions and performance of the product to handle the product correctly.

- MELSEC iQ-R CPU Module User's Manual (Startup)
SH-081263ENG
- MELSEC iQ-R CPU Module User's Manual (Application)
SH-081264ENG

■ *Manuels correspondants*

Avant d'utiliser ce produit, prière de lire les "Safety Guidelines" (directive de sécurité) fournies avec l'unité de base, en particulier dans les sections suivantes.

- *PRÉCAUTIONS DE SÉCURITÉ*
- *CONDITIONS D'UTILISATION DE PRODUIT*
- *DIRECTIVES CEM ET BASSE TENSION*
- *DIRECTIVES SUR LES MACHINES*
- *GARANTIE*

■ Packing list

Check that the following items are included in the package of the product.

Item	Quantity
Module (R□SFCPU and R6SFM)	1 each
Before Using the Product (this manual)	1
Mitsubishi Safety Programmable Controller MELSEC iQ-R Series Machinery Directive (2006/42/EC) Compliance	1

■ Mounting modules

When installing the programmable controller in a control panel, fully consider its operability, maintainability, and environmental resistance.

Securely mount all the MELSEC iQ-R series modules used on the base unit.

For details on the mounting method, refer to the MELSEC iQ-R Module Configuration Manual.

■ *Montage des modules*

Pour installer l'automate programmable dans un tableau de commande, prendre en compte tous les aspects d'opérabilité, de maintenabilité et de résistance à l'environnement.

Monter fermement sur l'unité de base tous les modules de la série MELSEC iQ-R à utiliser.

Pour le détail de la méthode de montage, voir le MELSEC iQ-R Module Configuration Manual (Manuel de configuration du module MELSEC iQ-R).

■ Operating ambient temperature

Use the product within the range of 0 to 55°C.

■ *Température ambiante de fonctionnement*

Ce produit doit être utilisé entre 0 et 55°C.

■ Safety standards

- For Machinery Directive (2006/42/EC) compliance

Refer to the following.

Mitsubishi Safety Programmable Controller MELSEC iQ-R Series Machinery Directive (2006/42/EC) Compliance
(BCN-P5999-0502)

- For UL listed

UL evaluation was performed only to UL508.

Functional safety evaluation was performed by TÜV Rheinland®.*1

*1 TÜV Rheinland is a registered trademark.

■ Information and services

For further information and services, please consult your local Mitsubishi representative.