

## AJ65VBTCE2-8T形CC-Linkシステム小形タイプリモートI/Oユニットユーザーズマニュアル AJ65VBTCE2-8T CC-Link System Compact Type Remote I/O Module User's Manual

### ● 安全上のご注意 ●

(ご使用前に必ずお読みください)

本製品のご使用に際しては、本マニュアルをよくお読みいただくと共に、安全に対して十分に注意を払って、正しい取扱いをしていただくようお願いいたします。

なお、この注意事項は本製品に関するもののみについて記載したもので、シーケンサシステムとしての安全上のご注意に関しては、CPUユニットのユーザーズマニュアルを参照してください。

この●安全上のご注意●では、安全注意事項のランクを「危険」、「注意」として区分しております。



取り扱いを誤った場合に、危険な状況が起こりえて、死亡または重傷を受ける可能性が想定される場合。



取り扱いを誤った場合に、危険な状況が起こりえて、中程度の傷害や軽傷を受ける可能性が想定される場合および物的損害だけの発生が想定される場合。

なお、△ 注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。

いずれも重要な内容を記載していますので必ず守ってください。

本マニュアルは必要なときに読めるように大切に保管すると共に、必ず最終ユーザまでお届けいただくようにお願いいたします。

#### 【設計上の注意事項】

##### ◆ 危険

- データリンクが交信異常になったとき、交信異常局は次のような状態になります。  
交信状態情報を使って、システムが安全側に働くようにシーケンスプログラム上でインタロック回路を構成してください。誤出力、誤動作により事故の恐れがあります。
  - (1) リモートI/O局からの入力は、全点OFFします。
  - (2) リモートI/O局からの出力は、全点OFFします。
- リモートI/Oユニットの故障によっては、出力がON状態またはOFF状態になることがあります。重大な事故につながるような出力信号については、外部で監視する回路を設けてください。

##### △ 注意

- ユニットは、CPUユニットユーザーズマニュアル記載の一般仕様の環境で使用してください。  
一般仕様の範囲以外の環境で使用すると、感電、火災、誤動作、製品の損傷あるいは劣化の原因になります。
- 制御線や通信ケーブルは、主回路や動力線などと束縛したり、近接したりしないでください。100mm以上を目安として離してください。  
ノイズにより、誤動作の原因になります。

#### 【取付け上の注意事項】

##### △ 注意

- ユニットの導電部分には直接触らないでください。  
ユニットの誤動作、故障の原因になります。
- ユニットは、DINレールなどにて、確実に固定してください。  
ユニットを確実に固定しないと、落下、誤動作の原因になります。
- 各接続ケーブルのコネクタは装着部に確実に装着してください。  
接触不良による誤動作の原因になります。

#### 【配線上の注意事項】

##### ◆ 危険

- 配線作業などは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、感電あるいは製品の損傷の恐れがあります。

##### △ 注意

- FG端子はシーケンサ専用のD種接地（第三種接地）以上で必ず接地を行ってください。感電、誤動作の恐れがあります。
- ユニットの配線は、製品の定格電圧および端子配列を確認した上で正しく行ってください。定格と異なった電源を接続したり、誤配線すると、火災、故障の原因になります。
- ユニット内に、切削や配線クズなどの異物が入らないように注意してください。  
火災、故障、誤動作の原因になります。
- ユニットに接続する電線やケーブルは、必ずダクトに納める、またはクランプによる固定処理を行ってください。ケーブルをダクトに納めなかつたり、クランプによる固定処理をしていないと、ケーブルのふらつきや移動、不注意の引っ張りなどによるユニットやケーブルの破損、ケーブルの接触不良による誤動作の原因となります。
- 制御線と通信ケーブルは束縛したり、近接したりしないでください。  
ノイズにより、誤動作の原因になります。
- ユニットに接続された通信ケーブルや電源ケーブルを取り外すときは、ケーブル部分を手に持つて引っ張らないでください。  
コネクタ付きのケーブルは、ユニットに接続している部分のコネクタを手で持つて取り外してください。コネクタなしのケーブルは、ユニットに接続している部分のネジを緩めてから取り外してください。  
ユニットに接続された状態でケーブルを引っ張ると、ユニットやケーブルの破損、ケーブルの接続不良による誤動作の原因となります。

### ● SAFETY PRECAUTIONS ●

(Read these precautions before using.)


When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment. Refer to the CPU module user's manual for a description of the PC system safety precautions.

These ●SAFETY PRECAUTIONS● classify the safety precautions into two categories: "DANGER" and "CAUTION".



Procedures which may lead to a dangerous condition and cause death or serious injury if not carried out properly.

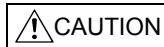

Procedures which may lead to a dangerous condition and cause superficial to medium injury, or physical damage only, if not carried out properly.

Depending on circumstances, procedures indicated by △ CAUTION may also result in to serious results.

In any case, it is important to follow the directions for usage.

Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

(0706) MEE

#### 【DESIGN PRECAUTIONS】

##### ◆ DANGER

- When a communication error occurs in the data link, the communication error station will be in the following condition. Configure an interlocking circuit in a sequence program using the communication status information so that the safety of the overall system is always maintained.  
Accident may occur due to output error or malfunction.
  - (1) Input points from remote I/O station will be all switched off.
  - (2) Output points from remote I/O station will be all switched off.
- Input could be switched on or off when a problem occurs in the remote I/O modules. So build an external monitoring circuit that will monitor any output signals that could cause a serious accident.

##### △ CAUTION

- Use each module in an environment as specified in the "general specification" in the CPU module user's manual. Usage of the module outside the general specification range may cause electric shock, fire, malfunction, product damage or deterioration.
- Do not have control cables and communication cables bundled with or placed near by the main circuit and/or power cables. Wire those cables at least 100mm(3.94 inch) away from the main circuit and/or power cables. It may cause malfunction due to noise interference.

#### 【INSTALLATION PRECAUTIONS】

##### △ CAUTION

- Do not directly touch the module's conductive parts.  
Doing so could cause malfunction or trouble in the module.
- Use a DIN rail or similar to securely fix the module. If the module is not securely fixed, it may fall off or cause malfunction.
- Correctly connect the cable connectors to the loading positions.  
A poor connection could result in erroneous operation.

#### 【WIRING PRECAUTIONS】

##### ◆ DANGER

- Completely turn off the externally supplied power used in the system when installing or placing wiring. Not completely turning off all power could result in electric shock or damage to the product.

##### △ CAUTION

- Always ground the FG terminal. There is a risk of electric shock or malfunction.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire and/or product failure.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the module. Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
- Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
- Do not pull the cable part by hand when removing a communication cable and power supply cable from a module.  
For a cable with connector, remove it while holding the connector by hand.  
For a cable with no connector, loosen the screw securing the cable to the module and then remove it.  
Pulling a cable with connected to the module may damage the module or cable, or result in malfunction due to cable poor connection.

【立上げ・保守時の注意事項】

◆危険

- 通電中に端子やコネクタに触れないでください。  
感電の原因になります。
- 清掃は、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。

△注意

- ユニットの分解、改造はしないでください。  
故障、誤動作、ケガ、火災の原因になります。
- ユニットは落下させたり、強い衝撃を与えないでください。  
ユニットの破損の原因になります。
- ユニットの盤への取付け・取外しは必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。
- ユニットに触れる前には、必ず接地された金属などに触れて、人体などに帯電している静電気を放電してください。  
静電気を放電しないと、ユニットの故障や誤動作の原因になります。

【廃棄時の注意事項】

△注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

1. 仕様

項目		内容
出力点数		8点
絶縁方式		フォトカプラ絶縁
定格負荷電圧		DC12/24V
使用負荷電圧範囲		DC10.2~26.4V (リップル率5%以内)
最大負荷電流		0.1A/1点、0.8A/1コモン
最大突入電流		0.7A 10ms以下
OFF時漏洩電流		0.1mA以下
ON時最大電圧降下		0.1V以下(TYP.) 0.1A, 0.2V以下(MAX.) 0.1A
出力形式		シンクタイプ
保護機能		過負荷保護機能、過電圧保護機能、過熱保護機能
応答時間	OFF→ON	1ms以下
	ON→OFF	1ms以下(抵抗負荷)
出力部外部供給電源	電圧	DC10.2~26.4V (リップル率5%以内)
	電流	5mA以下(DC24V、全点ON時) 外部負荷電流は含まず
サーボキラー		ツエナーダイオード
コモン方式		8点1コモン (センサコネクタ(e-CON)形2線式)
占有局数		1局32点割付け(8点使用)
I/Oユニット電源	電圧	DC20.4~26.4V (リップル率5%以内)
	電流	35mA以下(DC24V、全点ON時)
ノイズ耐量		DCタイプのノイズ電圧500Vp-p、ノイズ幅1μs、 ノイズ周波数25~60Hzのノイズシミュレータによる
耐電圧		DC外部端子一括アース間AC500V 1分間
絶縁抵抗		DC外部端子一括アース間DC500V 絶縁抵抗計にて 10MΩ以上
保護等級		IP1XB
質量		0.10kg
外部接続 方式 <sup>*1</sup>	通信部	通信用ワンタッチコネクタ [伝送回路] (5ピン・圧接タイプ、コネクタ用プラグは別売 : A6CON-L5P) (オプション) 通信用オンラインコネクタ : A6CON-LJ5P
	電源部	電源・FG用ワンタッチコネクタ [I/Oユニット電源、負荷電源、出力部外部供給電 源・FG] (5ピン・圧接タイプ、コネクタ用プラグは別売 : A6CON-PW5P, A6CON-PW5P-SOD) (オプション) 電源用オンラインコネクタ : A6CON-PWJ5P
	入出力部	センサコネクタ(e-CON) [I/O信号] (4ピン・圧接タイプ、コネクタ用プラグは別売)
適用DINレール		TH35-7.5Fe, TH35-7.5AI (JIS C 2812に準拠)
適合電線 サイズ	通信用コネクタ	適合ケーブル : FANC-110SBH, CS-110
	電源・FG用コネクタ	0.66~0.98mm <sup>2</sup> (AWG#18) [φ2.2~3.0mm (A6CON-PW5P), φ2.0~2.3mm (A6CON-PW5P-SOD)] 素線径0.16mm以上 絶縁被覆材質 : PVC (耐熱ビニル)
	入出力用コネクタ	センサコネクタ(e-CON) コネクタ用プラグは別売 (適合サイズ : 0.08~0.5mm <sup>2</sup> 、使用するコネクタ用 プラグにより異なる) CC-Linkシステム小形タイプリモートI/Oユニット ユーチュアーズマニュアル(詳細編) SH(名)3307参照

\*1: 各コネクタの圧着方法は、CC-Linkシステム小形タイプリモートI/Oユニットユーチュアーズマニュアル(詳細編) SH(名)3307を参照してください。

【STARTING AND MAINTENANCE PRECAUTIONS】

◆DANGER

- Do not touch terminals or connectors when the power is on. Doing so could cause an electric shock.
- Switch off all phases of the externally supplied power used in the system when cleaning the module. Not doing so could result in electric shock.

△CAUTION

- Never try to disassemble or modify module. It may cause product failure, malfunction, fire or cause injury.
- Do not drop or apply any strong impact to the module. Doing so may damage the module.
- Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel. Not doing so could result in damage to the product.
- Always make sure to touch the grounded metal to discharge the electricity charged in the electricity charged in the body, etc., before touching the module.  
Failure to do so may cause a failure or malfunctions of the module.

【DISPOSAL PRECAUTIONS】

△CAUTION


- When disposing of this product, treat it as industrial waste.

1. Specification

Item	Description	
Number of output points	8 points	
Isolation method	Photocoupler	
Rated load voltage	12/24 V DC	
Operating load voltage range	10.2 to 26.4 V DC (ripple ratio: within 5 %)	
Max. load current	0.1 A/point 0.8 A/common	
Max. inrush current	0.7 A 10 ms or lower	
Leakage current at OFF	0.1 mA or lower	
Max. voltage drop at ON	0.1 V or lower (TYP.) 0.1 A, 0.2 V or lower (MAX.) 0.1 A	
Output form	Sink type	
Protection function	Overload protection function, overvoltage protection function and overheat protection function	
Response time	OFF→ON 1 ms or lower ON→OFF 1 ms or lower (resistive load)	
External power supply for output part	Voltage 10.2 to 26.4 V DC (ripple ratio: within 5 %) Current 5mA or lower (when 24 V DC, all points ON) Not including external load current	
Surge suppression	Zener diode	
Wiring method for common	8 points/common (Sensor connector (e-con) type 2-wire type)	
Number of stations occupied	1 station 32 points assignment (use 16 points)	
I/O module power supply	Voltage 20.4 to 26.4 V DC (ripple ratio: within 5 %) Current 35 mA or lower (when 24 V DC, all points ON)	
Noise durability	DC type noise voltage 500 Vp-p, noise width 1 μs, noise frequency 25 to 60 Hz (noise simulator condition)	
Withstand voltage	500 V AC for 1 minute between all DC external terminals and ground	
Insulation resistance	10 MΩ or higher, measured with a 500 V DC insulation resistance tester between all DC external terminals and ground	
Protection of degree	IP1XB	
Weight	0.10 kg	
External wiring system <sup>*1</sup>	Communication part One-touch connector for communication [Transmission circuit] (5 pins pressure welding type) The plug for the connector is sold separately: A6CON-L5P < Option > Online connector for communication: A6CON-LJ5P	
	Power supply part One-touch connector for power supply and FG [I/O module power supply, Load power supply, External power supply for output and FG] (5 pins pressure welding type) The plug for the connector is sold separately: A6CON-PW5P, A6CON-PW5P-SOD < Option > Online connector for power supply: A6CON-PWJ5P	
	I/O part Sensor connector (e-CON) [I/O signal] (4 pins pressure welding type) The plug for the connector is sold separately	
Applicable DIN rail	TH35-7.5Fe, TH35-7.5AI (conforming to IEC 60715)	
Applicable wire size	Connector for communication Applicable cable: FANC-110SBH, CS-110	
	Connector for power supply and FG 0.66 to 0.98 mm <sup>2</sup> (18AWG) [φ2.2 to 3.0 mm (A6CON-PW5P), φ2.0 to 2.3 mm (A6CON-PW5P-SOD)] wire diameter 0.16 mm or more Outer insulation layer material: PVC (Heat-resistant vinyl)	
	Connector for I/O Sensor connector (e-CON) Plug for connector is sold separately (Applicable wire size: 0.08 to 0.5 mm <sup>2</sup> , depending on the plug for connector) Refer to CC-Link System Compact Type Remote I/O Module User's Manual SH(NA)4007.	

\*1: For crimping each connector, refer to CC-Link System Compact Type Remote I/O Module User's Manual (SH(NA)4007).

### 外部接続 (External connection)

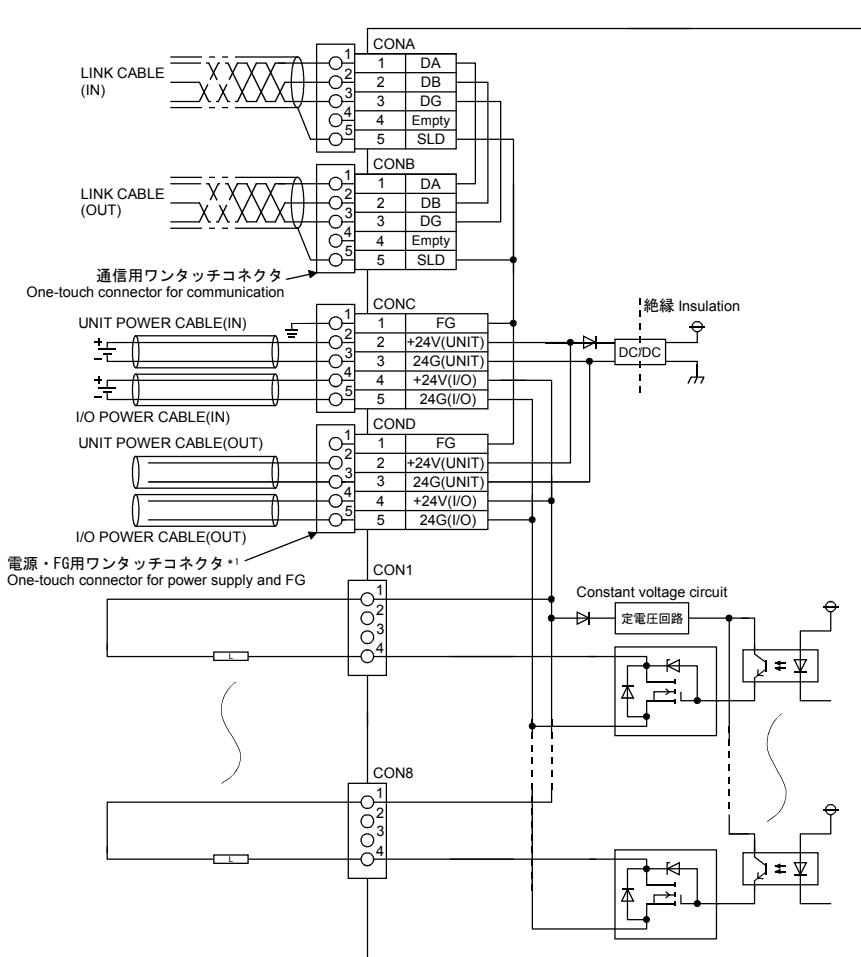

\*1：電源・FG用コネクタのアキには必ず無配線のコネクタを装着してください。  
The connector in non-divided line should be installed to empty of connector for the power supply and FG.

ピン番号 Pin No.	信号名 Signal name
CON A,B	1 DA
	2 DB
	3 DG
	4 Empty
	5 SLD
CON C,D	1 FG
	2 +24V (UNIT)
	3 24G (UNIT)
	4 +24V (I/O)
	5 24G (I/O)

端子台 Terminal block	端子配列 Pin arrangement
CON1 (Y0)	1 +24V 2 Empty 3 Empty 4 Y0
CON2 (Y1)	1 +24V 2 Empty 3 Empty 4 Y1
CON3 (Y2)	1 +24V 2 Empty 3 Empty 4 Y2
CON4 (Y3)	1 +24V 2 Empty 3 Empty 4 Y3
CON5 (Y4)	1 +24V 2 Empty 3 Empty 4 Y4
CON6 (Y5)	1 +24V 2 Empty 3 Empty 4 Y5
CON7 (Y6)	1 +24V 2 Empty 3 Empty 4 Y6
CON8 (Y7)	1 +24V 2 Empty 3 Empty 4 Y7

ユニットの正面から見た場合  
A module view from the top

## 2. 取付け方法について


ユニットは、DINレールとネジによる取付けが可能です。  
またネジ取付け用固定具は、①に示す2通りの方法でユニットへ装着できます。  
ネジ取付け用固定具を②に示すように装着した場合には、アルミフレームなどの一直線の溝を利用してユニットを取付けることもできます。

取付け方向の詳細については、CC-Linkシステム小形タイプリモートI/Oユニットユーザーズマニュアル(詳細編)SH(名)3307を参照してください。

## 2. Installation method

Use a DIN rail or screws to install the module.  
In the latter method, the holding fixtures for screw installation can be attached to the module as shown in ① below. In method ② the module can be mounted to an aluminum frame or the like using the line groove of the frame.

For details of installation direction, refer to CC-Link System Compact Type Remote I/O Module User's Manual (SH(NA)-4007).

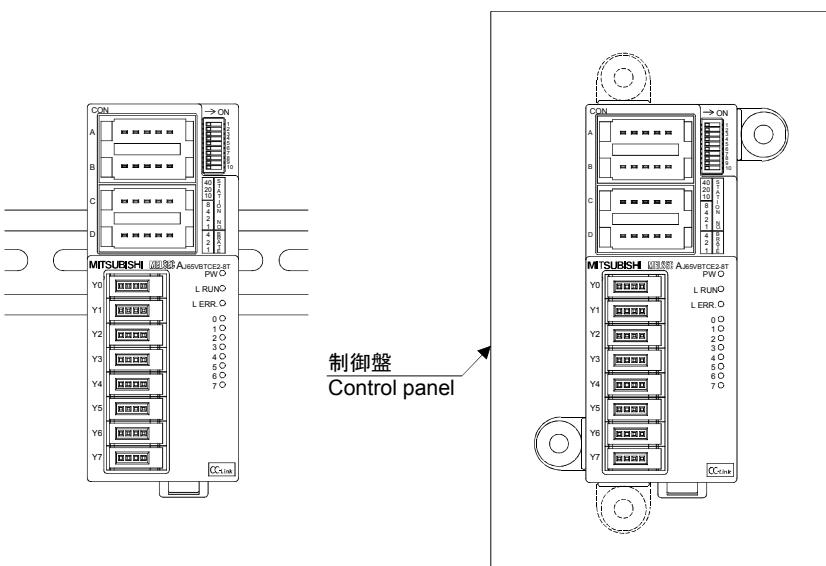


(1) DINレール取付け  
DIN rail-mounting

(2) ネジ取付け


Screw-mounting

① 制御盤に直接or装置に直接など  
The module can be directly mounted to the control panel, device or the like.

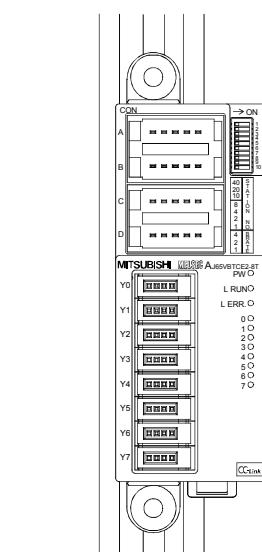


② アルミフレームなど  
Aluminum frame or the like

### 3. 各部の名称と設定

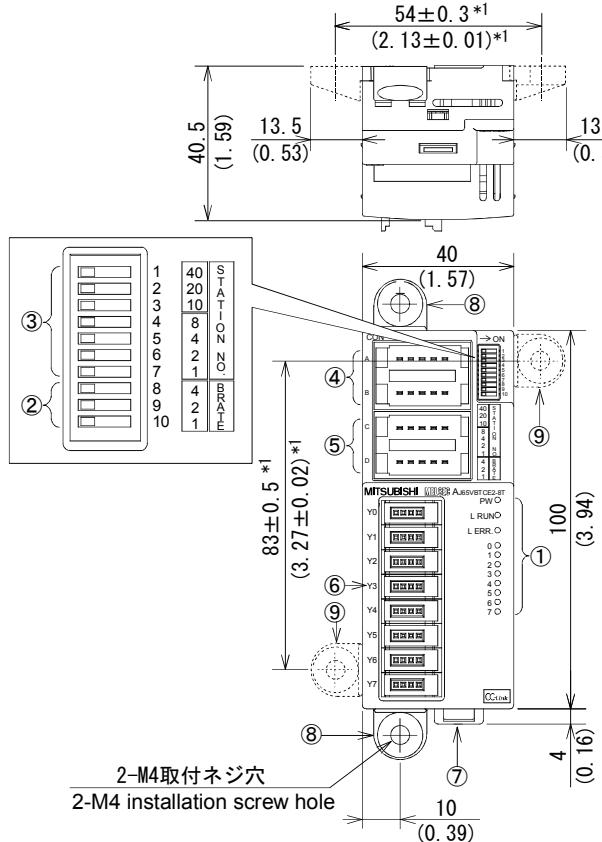

### 3. Part Names and Settings

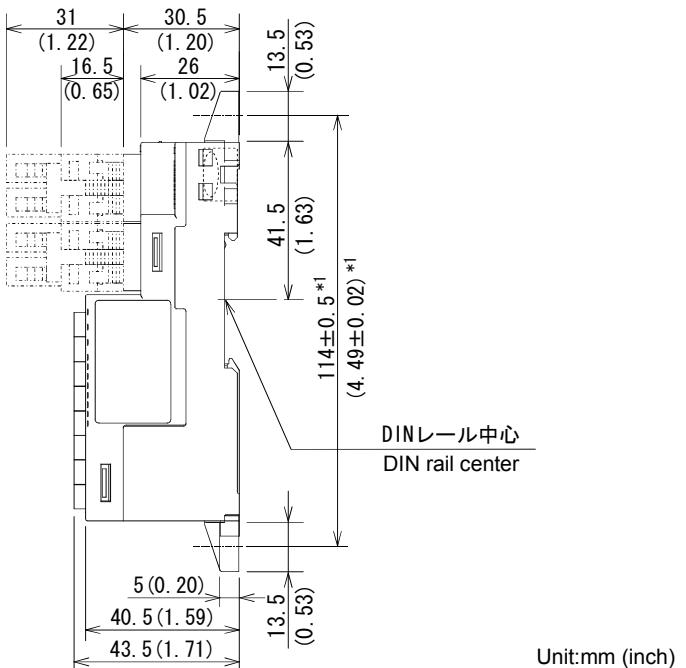

\*1: 取付ネジ加工寸法（取付ピッチ）

No.	名称	内 容																																	
①	動作表示LED	<table border="1"> <thead> <tr> <th>LED名</th> <th colspan="3">確認内容</th> </tr> </thead> <tbody> <tr> <td>PW</td> <td colspan="3">点灯：電源ON 消灯：電源OFF</td> </tr> <tr> <td>L RUN</td> <td colspan="3">点灯：交信正常時 消灯：交信断時 (タイムオーバエラー)</td> </tr> <tr> <td>L ERR.</td> <td colspan="3">点灯：交信エラー時 一定間隔で点滅： 通電中に局番設定／伝送速度設定スイッチの設定を変更したとき 不定間隔で点滅： 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯：交信正常時</td> </tr> <tr> <td>Y0~7</td> <td colspan="3">点灯：出力ON 消灯：出力OFF</td> </tr> </tbody> </table>	LED名	確認内容			PW	点灯：電源ON 消灯：電源OFF			L RUN	点灯：交信正常時 消灯：交信断時 (タイムオーバエラー)			L ERR.	点灯：交信エラー時 一定間隔で点滅： 通電中に局番設定／伝送速度設定スイッチの設定を変更したとき 不定間隔で点滅： 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯：交信正常時			Y0~7	点灯：出力ON 消灯：出力OFF															
LED名	確認内容																																		
PW	点灯：電源ON 消灯：電源OFF																																		
L RUN	点灯：交信正常時 消灯：交信断時 (タイムオーバエラー)																																		
L ERR.	点灯：交信エラー時 一定間隔で点滅： 通電中に局番設定／伝送速度設定スイッチの設定を変更したとき 不定間隔で点滅： 終端抵抗の設定が違っているとき ユニット、CC-Link専用ケーブルがノイズの影響を受けているとき 消灯：交信正常時																																		
Y0~7	点灯：出力ON 消灯：出力OFF																																		
②	伝送速度設定スイッチ	<table border="1"> <thead> <tr> <th rowspan="2">設定値</th> <th colspan="3">設定スイッチ状態</th> <th rowspan="2">伝送速度</th> </tr> <tr> <th>4</th> <th>2</th> <th>1</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>156 kbps</td> </tr> <tr> <td>1</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>625 kbps</td> </tr> <tr> <td>2</td> <td>OFF</td> <td>ON</td> <td>OFF</td> <td>2.5 Mbps</td> </tr> <tr> <td>3</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>5.0 Mbps</td> </tr> <tr> <td>4</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>10 Mbps</td> </tr> </tbody> </table> <p>伝送速度は必ず上記の範囲で設定してください。</p>	設定値	設定スイッチ状態			伝送速度	4	2	1	0	OFF	OFF	OFF	156 kbps	1	OFF	OFF	ON	625 kbps	2	OFF	ON	OFF	2.5 Mbps	3	OFF	ON	ON	5.0 Mbps	4	ON	OFF	OFF	10 Mbps
設定値	設定スイッチ状態			伝送速度																															
	4	2	1																																
0	OFF	OFF	OFF	156 kbps																															
1	OFF	OFF	ON	625 kbps																															
2	OFF	ON	OFF	2.5 Mbps																															
3	OFF	ON	ON	5.0 Mbps																															
4	ON	OFF	OFF	10 Mbps																															
③	局番設定スイッチ	<p>STATION NO. の “10”, “20”, “40” で局番の10の位を設定します。 STATION NO. の “1”, “2”, “4”, “8” で局番の1の位を設定します。 局番は必ず1～64の範囲で設定してください。<sup>2</sup> (例) 局番を “32” に設定するときは、下記のようにスイッチ設定を行います。</p> <table border="1"> <thead> <tr> <th rowspan="2">局番</th> <th colspan="3">十の位</th> <th colspan="3">一の位</th> </tr> <tr> <th>40</th> <th>20</th> <th>10</th> <th>8</th> <th>4</th> <th>2</th> </tr> </thead> <tbody> <tr> <td>32</td> <td>OFF</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> </tr> </tbody> </table>	局番	十の位			一の位			40	20	10	8	4	2	32	OFF	ON	ON	OFF	OFF	ON													
局番	十の位			一の位																															
	40	20	10	8	4	2																													
32	OFF	ON	ON	OFF	OFF	ON																													
④	通信用コネクタ	通信ラインの接続用ワンタッチコネクタ。																																	
⑤	電源・FG用コネクタ	ユニット電源ライン、I/O電源ライン、FGの接続用ワンタッチコネクタ。																																	
⑥	I/O用コネクタ	入出力信号の接続用コネクタ。																																	
⑦	DINレール用フック	ユニットをDINレールに取り付ける場合にDINレール用フックの中心線上を指でカチッと音がするまで押さえます。																																	
⑧	ネジ取付け用固定具	ユニットを盤などに取り付ける場合に、ユニットに装着して使用します。(⑧と⑨の2通りの装着が可能です。) ネジ取付け用固定具は、取り外すことが可能です。																																	
⑨	(付属品)																																		

\*2: 局番は重複して設定できません。

### 4. 同梱品（付属品）

ネジ取付け用固定具 2 個

\*1: Adjust the screws to ensure this length. (Mounting pitch)

No.	Item	Description		
①	Operating status LEDs	LED name	Confirmation details	
		PW	ON: Power supply ON OFF: Power supply OFF	
		L RUN	ON: Normal communication OFF: Communication shut off (time expiration error)	
		L ERR.	ON: Communication data error Flash at regular intervals: Indicates that the station number setting or transmission speed setting switch position was changed while power is ON Flash at irregular intervals: When the setting of the terminal resistor is wrong; when the cable for the module or CC-Link is affected by noise	
		Y0 to 7	OFF: Normal communication ON: Output ON OFF: Output OFF	
②	Transmission speed setting switch	Setting value	Setting switch status	Transmission speed
		0	OFF OFF OFF	156 kbps
		1	OFF OFF ON	625 kbps
		2	OFF ON OFF	2.5 Mbps
		3	OFF ON ON	5.0 Mbps
		4	ON OFF OFF	10 Mbps
		Be sure to set the transmission speed within the above range.		
③	Station number setting switch	Select “10”, “20” or “40” to set the tens place of the station number. Select “1”, “2”, “4” or “8” to set the ones place of the station number. Always set the station number within the range of 1 to 64. <sup>2</sup> (Example) Set the switches as below when setting the station number to 32:		
		Station number	Tens place	Ones place
		32	OFF ON ON OFF OFF ON ON	OFF ON ON OFF OFF ON ON
④	Connector for communication	One-touch connector for connection of communication line.		
⑤	Connector for power supply and FG	One-touch connector for unit power supply line, I/O power supply line, and FG.		
⑥	Connector for I/O	Connector for connection of I/O signal.		
⑦	Hook for DIN rail	When the module is installed to the DIN rail, push on the center line of the hook for DIN rail with a finger tip until a clicking sound is heard.		
⑧	Holding fixtures for screw installation (Accessory)	When mounting a module to a panel or similar, attach the fixtures to the module (in two positions of ⑧ and ⑨). Holding fixtures for screw installation are removal.		

\*2: Duplicate station number cannot be set.

### 4. Included parts (Accessory)

Holding fixtures for screw installation 2